


PRIOR TO FIRST USE

1. Remove all packaging materials.
2. Presses remove the battery cover on the underside of the appliance. See diagram ①
3. Insert 2×CR2032 batteries. Make sure that the batteries are correctly inserted, since incorrectly inserted batteries may damage that appliance! See diagram ② below.

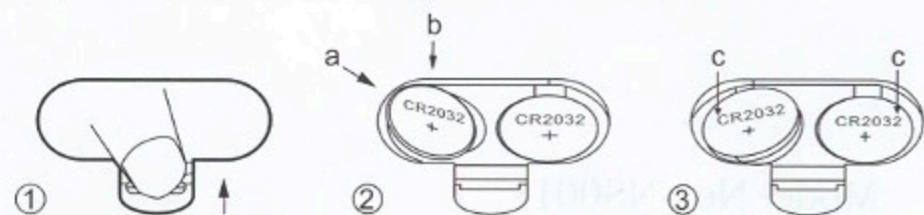

4. Set scale on some place that the Surface must be level for accurate operation.
6. Press C position in picture ③ to remove batteries easily.

USE

Before your first using, please follow below step:


1. Set switch on the back of scale to choose the needed unit g or lb.
2. Put the scale on the hard and level place, touch "ON/OFF" lightly with your finger, the screen will show "HI", after seconds, "0" appears.



3. Place the object you wish to weigh on the weighing platform. The weight will show on the screen soon...



4. Use the tare function of the appliance to weigh several consecutive objects in the following manner:
 - a) Place the object you wish to weigh on the weighing platform
 - b) Place the first object (for example, a bowl) on the weighing platform. If desired, note the weight of the object before proceeding.
 - c) Press the "TARE" button once to reset the weight. The weight of the first object will now be displayed as zero, even though it remains on the weighing platform.
 - d) Place the next object on the weighing platform (e.g. by pouring an ingredient into the bowl) and read the weight when the display is stable. Only the weight of the ingredients in the bowl will be displayed.

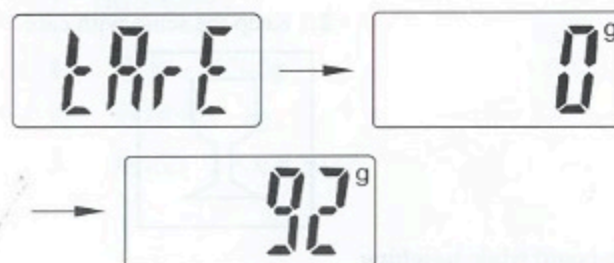

5. The appliance automatically switches off after 2 minutes with no activity. Or it will power off after touching the "ON/OFF" button for several seconds

NOTE

1. "ERR" will appear if the scale is overloaded (Over 5200g/11lb).



2. "Lo" will appear if battery is low and needs to be replaced.

